

## TILE & PEDESTAL APPLICATION



DECK SCREW

LOCK WASHER

First, place the lock washer into the kerf cut located between the upper slat and bottom rail of three wood pavers. Next, insert the fourth paver into the last open corner. Once all four pavers are in place and secure, thread the screw through the lock washer and hand-tighten it into the pedestal top. Make sure all four pavers are firmly attached to the pedestal, but avoid over-tightening the screw.




## IPE WOOD & PAVER TRANSITION AND ALIGNMENT

GENERAL NOTES: APPLY TO ALL OF THE ABOVE PRODUCTS


1. Follow the tile product specifications for installation.
2. The drawing is not to scale.
3. Buffer pads must be used.
4. Contractor's note: Visit our website for product and company information.




## TILE & PEDESTAL APPLICATION

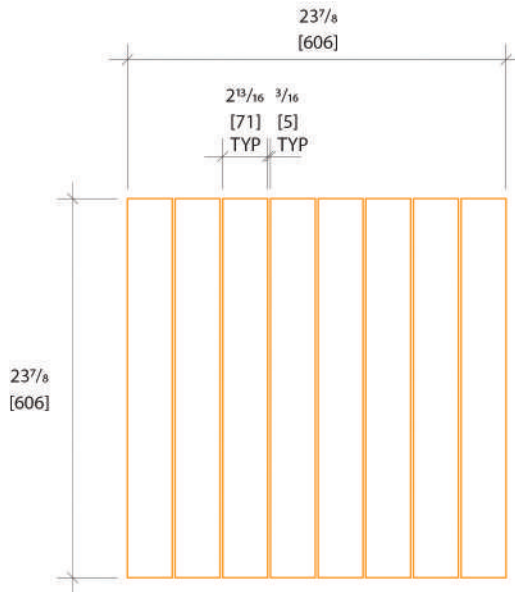


TOP VIEW

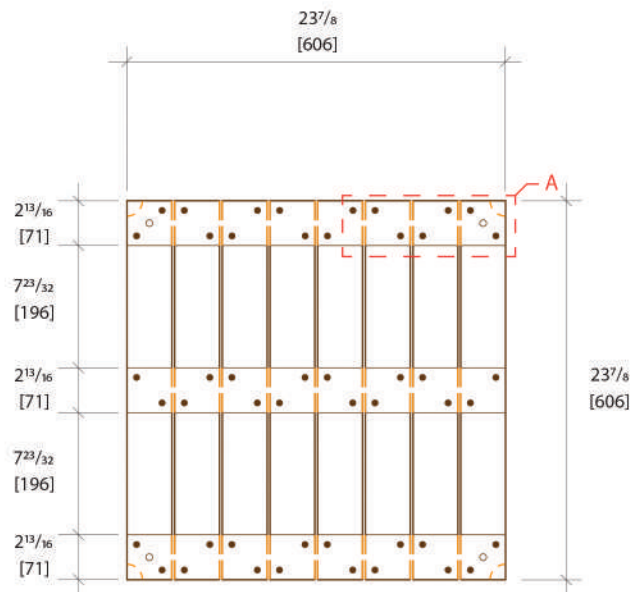


BOTTOM VIEW

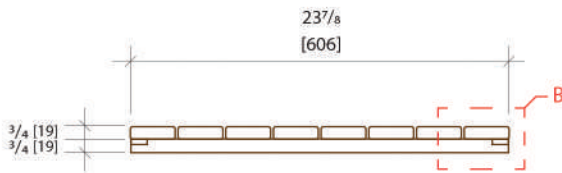


FRONT VIEW

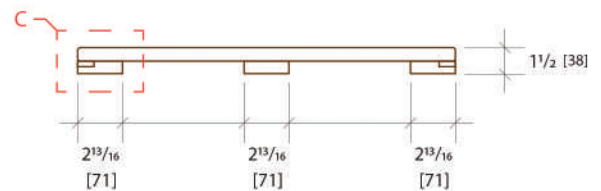


SIDE VIEW

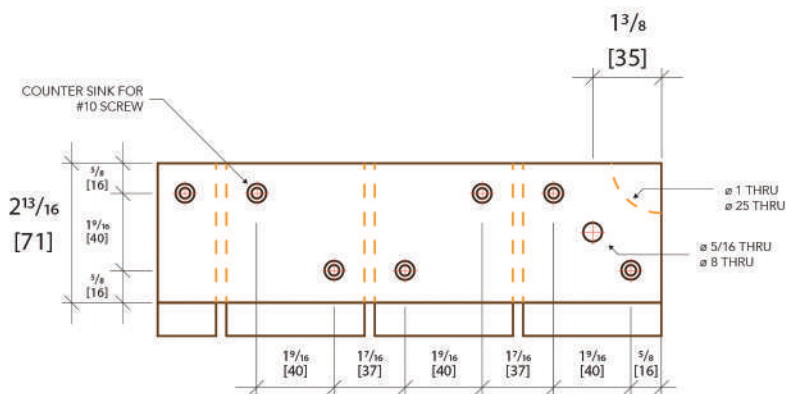

DETAIL A

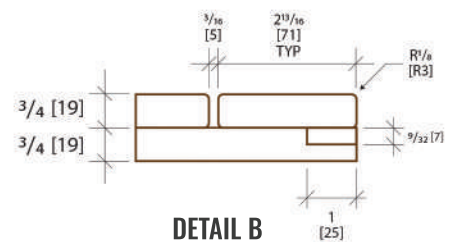

DETAIL B

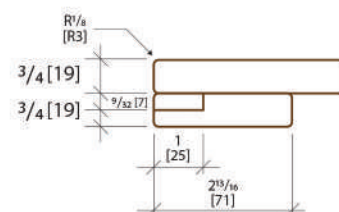

DETAIL C